



Set Includes


- 4 Banner arms
- 2 Mounting brackets with 4 Pole clamps
- 1 Telescopic pole
- 1 Base with thorn

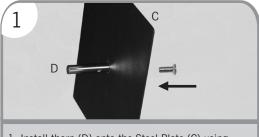


1. Install thorn (D) onto the Steel Plate (C) using the screw.

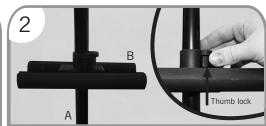


2. Locate the mounting bracket (B) with the larger diameter hole and install it on the bottom of the telescopic pole (A). (slots of the pole clamps must be facing upwards) Press the thumb lock to secure.

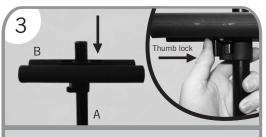

3. Install the other mounting bracket (B) on top of the telescopic pole (A) with the slots of the pole clamps facing downwards. Press the thumb lock to secure.

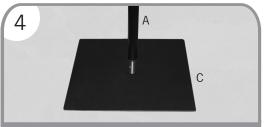

4. Position the telescopic pole (A) onto the thorn of the Steel Plate (C).

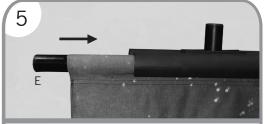

5. Place the banner arm (E) through the pole sleeve of the print. Slide into the slot of the pole clamps carefully. Do the same for the banner at the bottom.



6. Repeat Step 5 if using a second banner on the other side.



7. Once the banner(s) is secured in the pole clamps, adjust the telescopic pole (A) to the desired height. Press the thumb lock to secure.

Adjust the print until taut by adding slight pressure on the bottom mounting bracket as necessary.



Do not set up your Classic Stand in extreme winds (24-31 mph or higher) and/or severe storms. User must read and observe construction sheet. If this is done incorrectly it may result in damage to the unit, injury or death, and all warranties will be void.





AMERICA'S SUPERSTORE FOR CHURCH BANNERS, DISPLAY SYSTEMS & INSPIRATIONAL PRODUCTS